



ONLINE MANUAL

 


251212_V1.2



- Do not operate this device in a hazardous atmosphere.
- Do not replace or change accessories in a hazardous atmosphere. Contact sparking may occur while installing or removing accessories and cause an explosion or fire.
- Turn a device off before removing or installing a battery or accessory.
- Do not disassemble this device in any way that exposed the internal electrical circuits of the unit.
- Make sure to read this manual before using the machine. Please keep it in hand for future reference.
- Disclaimer: The products of GOLD APOLLO are intended for legal use only. Users must comply with local laws and regulations. GOLD APOLLO assumes no legal responsibility for any consequences arising from improper, illegal, or infringing actions. In the event of violations, we reserve the right to terminate transactions.

OVERVIEW & BASIC OPERATION

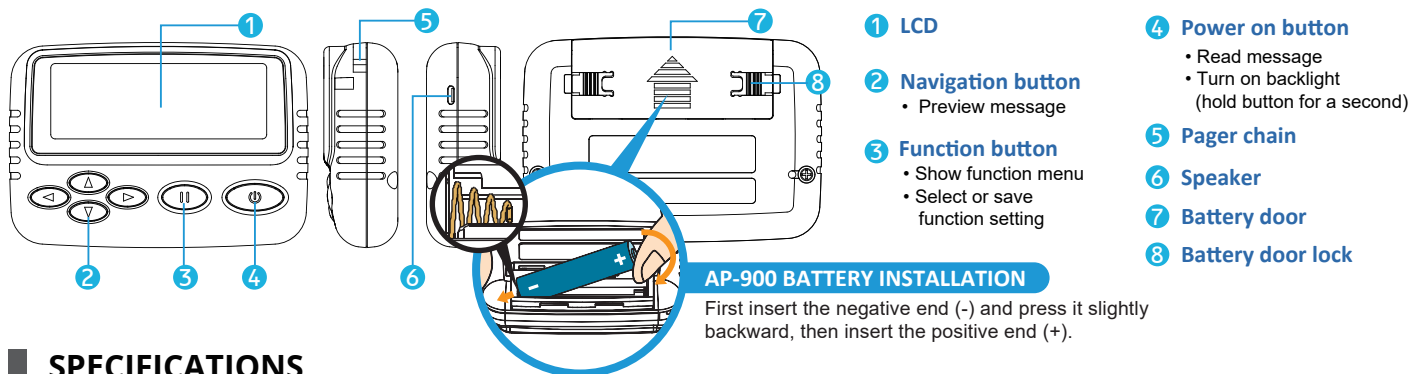

SPECIFICATIONS

FREQUENCY	VHF 135~174 MHz UHF 430~470 MHz	SPURIOUS REJECTION	40dB below carrier
		ALERT TONE LOUDNESS	87db @ 10 cm
PAGING SENSITIVITY	512bps-5μV/M, 1200bps-7μV/M, 2400bps-9μV/M	CAPCODES	8 Capcodes for POCSAG
BIT RATE	512 / 1200 / 2400 bps for POCSAG	BATTERY	AAA Alkaline batteries
CHANNEL SPACING	12.5KHz, 25KHz	DIMENSION	80.7(L) x 55.4(W) x 20(H) mm
CODE FORMAT	POCSAG	WEIGHT	61.5 g

ICON

Pager Status Symbols

- ⦿ POWER ON INDICATOR
- 🎵 MUSIC ALERT
- 🔊 BEEP ALERT
- 🌙 AUTO SLEEP INDICATOR
- 🔔 ALARM INDICATOR
- 🔄 AUTO SCROLL INDICATOR
- 🔋 BATTERY CAPACITY
- 📶 OUT OF RANGE INDICATOR

 
Function Menu Symbols

- 🔍 / 🔍 ZOOM IN / OUT
- 🔄 SET SCROLL
- 🕒 SET TIME
- 🔔 SET ALARM
- 🌙 AUTO SLEEP SET
- 🔕 PAGER OFF
- 🔊 SET ALERT
- ⬇️ CAPCODE SET
- ↔️ ESCAPE
- 🔒 MESSAGE LOCK
- 🔓 MESSAGE UNLOCK
- 🗑️ MESSAGE DELETE
- 🗑️ DELETE ALL
- 📁 MOVE TO MEMO

Message Status Symbols

- ▲ / ▼ PERSONAL MESSAGE
- 🔒 / 📁 LOCKED MESSAGE
- 📁 / 📁 MEMO MESSAGE FOLDER / INDICATOR
- 📁 / 📁 FULL MESSAGE FOLDER
- 📁 / 📁 MAILDROP FOLDER
- 🎵 / 🎵 MAILDROP FOLDER (ALERT ON)
- ▲ / ▼ DUPLICATE MESSAGE INDICATOR
- 🔍 ERROR MESSAGE
- 📁 DUPLICATE MESSAGE INDICATOR
- 📁 MAIL DROP MESSAGE INDICATOR

OPERATION




BATTERY GAUGE

The battery indicator is located on the status screen and keeps you informed of the battery energy level. The three indicators range from 🔋 (full), 🔋 (1/2), 🔋 (low). Whenever the low battery shows on display, Please replace the new battery.



READ MESSAGE

 1. A flashing ▲ / ▼ symbol indicates you have a unread message/mailedrop.
 2. Use navigation buttons to preview the message/mailedrop.
 3. Press ⦿ to read the message.
 4. Press ⦿ again to view the next page.
- ※ If you have set "Auto Scroll," the pager will scroll through the message automatically.




READ FULL MESSAGE

1. Press or to move the cursor to the full message folder.
2. Press to read the message.
- The symbol in the top-left corner of the message indicates the message has been put into the full message folder.



DELETE MESSAGE

 1. Press or to move the cursor to the message you want to delete.
2. Press to read the message.
3. Press , then select .
4. Press again to delete the message.



MOVE MESSAGE TO MEMO

1. Press or to move the cursor to the message you want to store.
2. Press to read the message.
3. Press , then select .
4. Press again to move the message to memo message folder.



ZOOM IN / OUT

1. Press , then select / .
- Zoom in: 2 lines in a page.
- Zoom out: 4 lines in a page.



SET TIME

1. Press , then select .
2. Press or to move the cursor, then press or to set the time and date.
3. Press again to save the setting.



AUTO SLEEP SET

1. Press , then select .
2. Press or to turn on/off the auto sleep feature.
3. Press or to move the cursor, or to set the start/end time.
4. Press again to save the setting.



CAPCODE SET

1. Press and select .
2. Press and to move the cursor.
3. Press and to turn on/off capcode 1-8.



 
LOCK MESSAGE

1. Press or to move the cursor to the message you want to lock.
2. Press , then select .
3. Press again to lock the message.
- The symbol indicates the message has been locked, you can select to unlock the message.



DELETE ALL MESSAGE

1. Press , then select .
2. Press again to delete all message, except locked and unread messages.




ERROR MESSAGE

The symbol in the top-left corner of the message indicates the message is an Error message.



SET SCROLL

 1. Press , then select .
2. Press or to select the scroll speed.
 - (1) Off
 - (2) Slow
 - (3) Normal
 - (4) Rapid
3. Press again to save the setting.
4. The symbol indicates auto scroll feature has been enabled.




SET ALARM

1. Press , then select .
2. Press or to move the cursor.
3. Press or to select alarm 1-5, turn on/off the alarm and set the time.



SET ALERT

 1. Press , then select .
2. Use navigation buttons to select the alert type you desire. (Alert , Melody , Vibrate , Silent)
3. Press again to save the setting.



TURN ON / OFF THE PAGER

1. Press , then select .
2. Press again to turn the pager off.
- Press to turn the pager on.

