 




- Do not operate this device in a hazardous atmosphere.
- Do not replace or change accessories in a hazardous atmosphere. Contact sparking may occur while installing or removing accessories and cause an explosion or fire.
- Turn a device off before removing or installing a battery or accessory.
- Do not disassemble this device in any way that exposed the internal electrical circuits of the unit.
- Make sure to read this manual before using the machine. Please keep it in hand for future reference.

Overview & Basic Operation

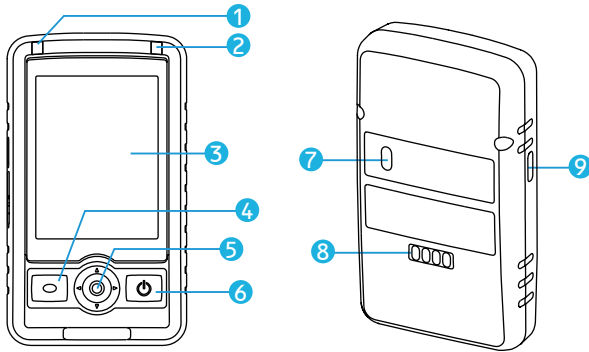

- 1 Charging indicator**
- 2 Message Received Indicator**
- 3 LCD**
 - The priority message preprogrammed in the software is displayed with a red backlight.
- 4 Return Button**
- 5 Navigation Joystick**
- 6 Power on Button**
 - Read message
 - Turn on backlight (hold button for a second)
- 7 Battery Switch**
- 8 Charging Contact (for optional charger)**
- 9 USB Port Type C**
 - Charging & Programming

Icon

Pager Status Symbols

- OUT OF RANGE INDICATOR
- ENABLE AUTO SLEEP MODE
- UNDER AUTO SLEEP MODE
- ALARM
- SET SCROLL
- BEEP
- VIBRATION
- BEEP & VIBRATION
- FLASH ONLY
- VOLUME
- BATTERY CAPACITY

Function Menu Symbols

- SET ALERT
- SET ALARM
- AUTO SLEEP SET
- SET TIME
- VOLUME
- SET SCROLL
- ZOOM IN/OUT
- PAGER OFF
- CAPCODE SET
- TECHNICAL
- INFORMATION

Message Status Symbols

 
- LOCKED MESSAGE
- UNREAD MESSAGE
- READ MESSAGE
- FULL MESSAGE FOLDER
- MEMO FOLDER
- MAILDROP FOLDER
- MAILDROP FOLDER (ALERT ON)
- DUPLICATE MESSAGE
- MEMO MESSAGE INDICATOR
- FULL MESSAGE INDICATOR
- MAILDROP MESSAGE INDICATOR
- DUPLICATE MESSAGE INDICATOR
- ERROR MESSAGE INDICATOR

Operation




READ MESSAGE

1. A flashing / symbol indicates there is an unread message/mail drop.
 2. Move joystick left/right/up/down to preview the message/mail drop.
 3. Press to read the entire content of the message. Press again to view the next page.
- If you have set "SET SCROLL" in the menu, the message will be scrolled automatically.

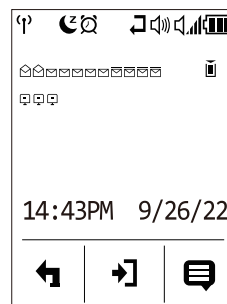

READ ALL MESSAGE

 1. Use joystick to move the cursor to the symbol.
2. Press to read the message.
3. The symbol in the top-left corner of the message indicates the message has been put into the full message folder.

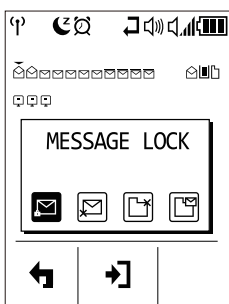


LOCK MESSAGE / DELETE MESSAGE / MOVE MESSAGE TO MEMO

1. Use joystick to move the cursor to a message.
2. Press to read the message.
3. Press joystick, then select (LOCK MESSAGE) / (DELETE) / (MOVE MESSAGE TO MEMO).
4. Press joystick again to confirm.




DELEATE ALL MESSAGE

 1. Move joystick to preview a message .
2. Press joystick, then select .
3. Press joystick again, then all messages will be deleted, except the locked & unread messages.

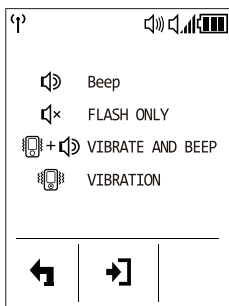


SET ALERT

 1. Press joystick to enter the menu, then select .
2. Move joystick left/right to choose the alert type you desire.
3. Press joystick again to save the settings.

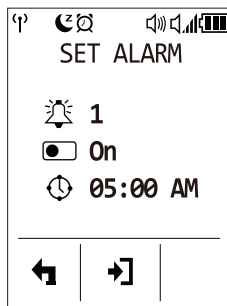


SET ALARM

 1. Press joystick to enter the menu, then select .
2. Move joystick up/down to select alarm 1-5.
3. Move joystick right to the option , then move joystick up/down to turn on/off the alarm.
4. Move joystick right to the option , then move joystick up/down to set the time.
5. Press joystick again to save the settings.

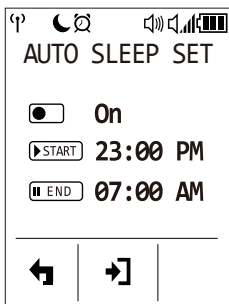


AUTO SLEEP SET

 1. Press joystick to enter the menu, then select .
 2. Move joystick up/down to turn on/off the Auto Sleep.
 3. Move joystick right to the options  &  to set the start / end time.
 4. Press joystick again to save the settings
- The symbol  indicates the Auto Sleep feature has been enabled.
 - The symbol  indicates your pager is under Auto Sleep mode.

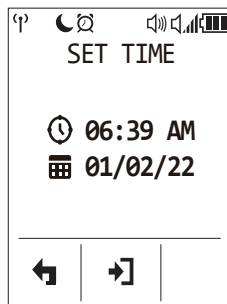


SET TIME

 1. Press joystick to enter the menu, then select .
2. Move joystick up/down to set the time and date, left/right to move the cursor.
3. Press joystick again to save the settings.

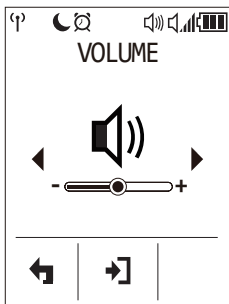


VOLUME

 1. Press joystick to enter the menu, then select .
2. Move joystick left/right to adjust the volume.
3. Press joystick again to save the settings.

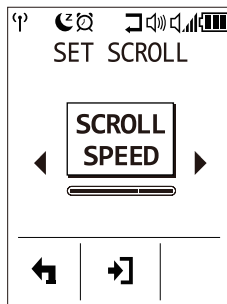


SET SCROLL

 1. Press joystick to enter the menu, then select .
 2. Move joystick left/right to set the scroll speed.
 3. Press joystick again to save the settings.
- The symbol  indicates the auto scroll has been enabled.

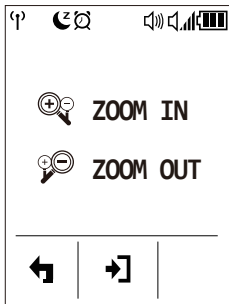


ZOOM IN / OUT

 1. Press joystick to enter the menu, then select .
 2. Move joystick left/right to zoom in/out the message.
 3. Press joystick again to save the settings.
- Zoom in: 6 lines in a page.
 - Zoom out: 8 lines in a page.

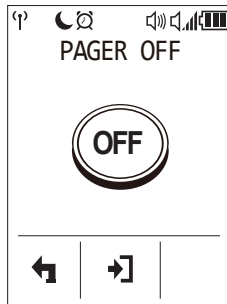


PAGER OFF

 1. Press joystick to enter the menu, then select .
 2. Press joystick again to turn off the pager.
- Press  to turn on the pager.

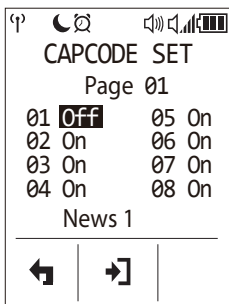


CAPCODE SET

 1. Press joystick to enter the menu, then select .
2. Press joystick again, then move joystick up/down to enable/disable the capcode.

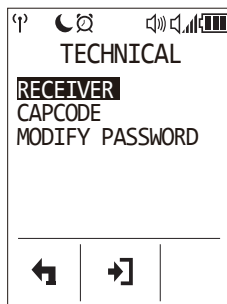

TECHNICAL

 1. Press joystick to enter the menu, then select .
 2. Press joystick again to enter Manual Programming.
- (Password is needed, please contact your local distributor for more information.)

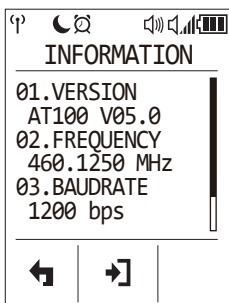

INFORMATION

1. Press joystick to enter the menu, then select .
2. Press joystick again to see the basic settings of the pager.